STORM EXTREME

MT848

User Manual

EN

Front view

Rear view

LED (flashlight function)

Rubber cover

Note! After charging always put rubber cover in place, make sure it is sealed to secure sockets before water and dust.

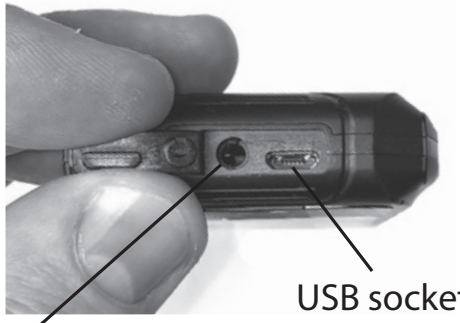

USB socket (charging/data transfer)

Headphones socket

Introduction

Dual Phone Storm is a waterproof and dust-proof dual SIM phone (IP67 standard). Please read this manual before using the device.

Declaration of conformity with IP67 standard

Device can be submerged to a depth of 1m for 30min. Device can not be operated under water. Do not press buttons, do not open rubber cover at bottom when device is under water. Do not charge device under water, do not use headphones under water. Always pay attention to the rubber seals, worn out seals must be replaced by authorized service department. Malfunctions resulting from water flood are excluded from guarantee.

EN

Before use

Slide down external battery cover as shown below. You will see internal battery cover.

Put nail into the grove and remove internal battery cover.

Install SIM card(s) as shown below

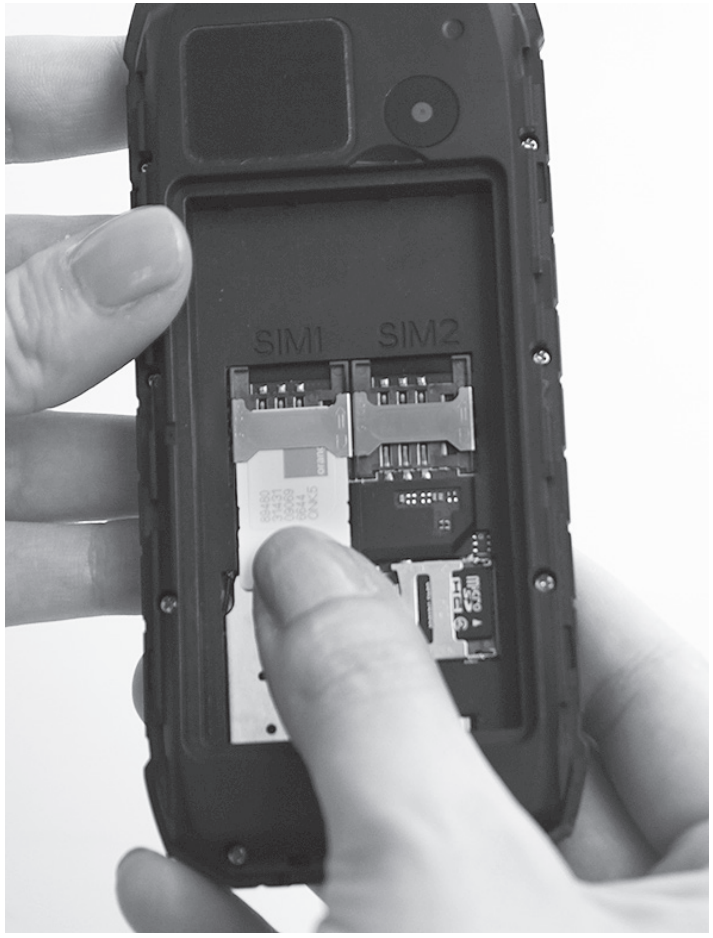

EN

Insert microSD card as shown below

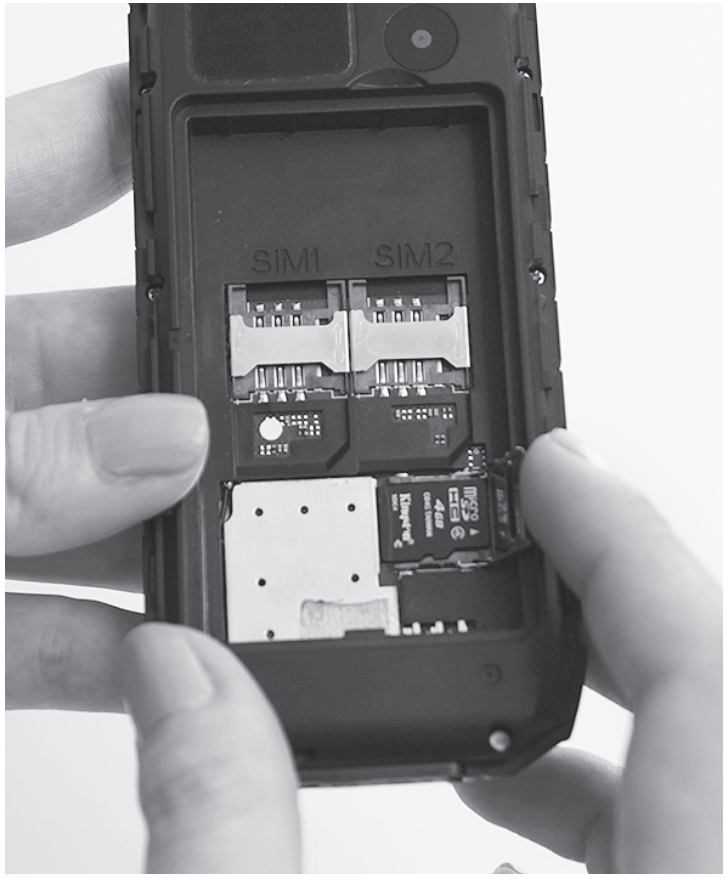

Install battery as shown below.

Put on internal battery cover and press around to make sure that rubber seal is fitted properly.

Next put on external battery cover, slide up to lock cover in place.

EN

Charging

Charge phone for few hours before first use, when battery is full battery icon will stop animate.

Power on/Power off

Press and hold „finish/power" button for 3 seconds to power on the device. Repeat this action to power off the device.

Flashlight function

When phone is in standby mode press and hold „0" button for 3 seconds, flashlight LED will be on. To switch off press and hold again „0" button for 3 seconds.

Using the phone

■ Dialing

Use numeric buttons to enter phone number or select contact from phonebook, press "call" button to dial number. If you have installed two SIM cards a question will pop-up, then use „up/down" buttons to select SIM card you want to use for dialing.

Note! During call „up/down" buttons will adjust volume. If you want to enter „+" when entering phone number (for i.e.+48 XXX XXX XXX) press twice „" button.*

■ Incoming calls

Press „call" button to receive incoming call.

■ Reject/finish call

To finish call or reject incoming call press „finish" button.

Note! Device is equipped with waterproof microphone – you need to speak louder.

Lock/Unlock keyboard

Press "finish/end" button to lock keyboard and switch off LCD. To unlock press "left function" button and then „right function" button to unlock keyboard and switch on the LCD. If LCD is off you can press "finish/end" button to

resume LCD first and then unlock keyboard as described.

Mute function

Press and hold „#" to disable all sounds, repeat this action to disable sounds and activate vibrations, repeat this action to return to previously selected sound profile .

Using menu

Press „menu" button in standby mode to enter menu icons. Use navigation buttons and OK button to enter options. You can also use left and right function buttons to enter context menu options.

Volume control

During voice call press "up/down navigation" button to adjust volume. Rings and alarms can be adjusted in "profiles" when you enter menu icons.

Quick access function

In standby mode use navigation button to quick access following functions:

- Up button – music player
- Down button – calendar
- Left button – new message
- Right button – select sound profile

Main menu content

- **Contacts** (manage contacts)
- **Multimedia***
  DV (record movies)
  Audio (music player)
  Video (video player)
  FM radio (function requires plugged-in headphones)
  Image (digital camera and image viewer)
  Recorder (sound recorder)
- **Call logs**
  Missed calls
  Dialed calls

- Received calls
- Call logs
- Delete all
- Call timers
- GPRS counter

■ **Settings**

Call settings
- Dual-SIM
- Call divert
- Call waiting
- Call barring
- Others

Phone setting
- Date&time
- Language settings
- Number key speech**
- Shortcut settings
- Auto power on/off
- Power management
- Restore factory settings

Display
- Animation effect
- Wallpaper setting
- Idle display setting
- Contrast
- Backlight
- Keypad backlight time

Security
- PIN
- Modify PIN2
- Phone locked
- Modify the cellphone password
- Privacy
- Auto keypad lock
- Lock screen by end-key
- Guardlock
- Fixed dialing
- Blacklist

Connections
- Network account
- GPRS Service

- Data connection settings
- Network selection

Message
- Write message (New SMS/New MMS*)
- Inbox
- Outbox
- Drafts
- Sentbox
- Security inbox
- Templates
- Broadcast message
- Voice mail server

Profiles
- Normal
- Silent
- Meeting
- Indoor
- Outdoor
- Earphone
- Bluetooth

Entertainment
- Ebook
- Sokoban

Camera*

Application
- Calendar
- Alarm
- Calculator
- Bluetooth
- Torch Light
- My files (file explorer)
- STK (SIM extras)

Note! Menu content depends on device version and hardware configuration.

**) please install microSD card before using multimedia functions.*
***) speech function works only in English language*

Some menu function require password, default password is: 1234.

Due to continuous development specification and appearance of product are subject to change without prior notice. For technical support please visit www.media-tech.eu.